

## **Do Not Disturb Condition**

This feature keeps calls from ringing at your LCD speakerphone and makes your station appear to be busy to intercom calls. As a reminder, a station that is set in Do Not Disturb mode will display this information on the LCD.

- **To enable DND, proceed as follows:**

1. SELECT OPTIONS.
2. SELECT NEXT until the DND option appears.
3. SELECT DND.
4. SELECT ON.
5. SELECT PREV.
6. PRESS SPEAKER to end.

- **To disable the DND condition:**

—REPEAT the above procedure, BUT SELECT OFF instead of ON at step 4.

- **To set a Do Not Disturb condition at your telephone when a call rings at your station:**

1. Hear ringing and notice incoming call information in display.
2. PRESS programmed DO NOT DISTURB button. (See Feature Buttons section on page 54 for programming instructions.)

Note: Although it does not appear on your screen while Do Not Disturb is displayed, the right interactive button will activate the Options menu.