



Q. How do I program a Direct Number Key (DSS Buttons) on my DX80 or DX120 phone?

A. Program DSS button:

- 1) With phone on hook
- 2) Press **FEATURE #** (pound) then **3**
- 3) Press button Key desired
- 4) Press Top Right – **chg**
- 5) Press Top Left – **dir**
- 6) Enter Desired Extension number _ _ _
- 7) Press Middle Top Key – **save**
- 8) Press **SPEAKER** button or pick up/hang up phone to exit programming