



## What is the HF-PR-TN button on my phone?

The **HF-PR-TN** button on your DX80 or DX120 phone is a button that controls the talk path on intercom calls. It stands for **HANDS-FREE - PRIVATE - TONE**, and the button toggles between the three options.

When your phone is in **HANDS-FREE** mode – the button will be **Green**. When you are in Hands-free mode someone can intercom you and you can respond and communicate over the speakerphone.

When your phone is in **PRIVATE** mode – the button will be **Red**. While in Private mode someone can intercom you and you can hear the caller, but you are muted, and the caller cannot hear your response unless you press the speaker button or pick up the handset.

When your phone is in **TONE** mode – the button will not be lit. While in Tone mode someone who intercoms you will hear your phone ring and must wait for you to answer it before they can speak or hear you.