



How do I adjust volume on my DSU and DSU II Impact Phones so that the Volume Level stays at the currently set level?

Handset Volume: Change Volume Level

While the phone is idle pick up the handset

Press **ITCM** button

Adjust the volume to preferred level

Press * * **5** (Star Star 5)

Hang Up

Speaker Volume: Change Volume Level

While phone is idle press the **Speaker** Button

Press **ITCM**

Adjust the volume to the preferred level

Press * * **5** (Star Star 5)

Disconnect by pressing the **Speaker** Button