



**How do I adjust volume on my DXP, DXP PLUS & FX System Impact Phones so that the Volume Level stays at the currently set level?**

**Handset Volume:** Change Volume Level

While the phone is idle pick up the handset

Press **ITCM** button

Adjust the volume to preferred level

Press \* \* 7 (Star Star 7)

Hang Up

**Speaker Volume:** Change Volume Level

While phone is idle press the **Speaker** Button

Press **ITCM**

Adjust the volume to the preferred level

Press \* \* 7 (Star Star 7)

Disconnect by pressing the **Speaker** Button